
### x neverdark

# **Neverdark FILD**

Smart fireplace

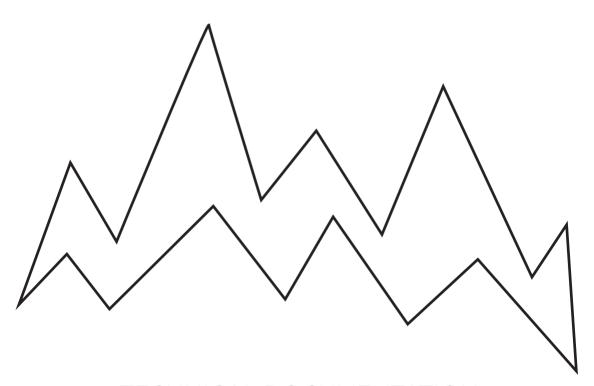

TECHNICAL DOCUMENTATION

## **CONTENT**

04 04 05	CONFIGURATION Standard configuration Optional Extra	FIREPLACE
06	FIREPLACE INTERFACES	
07	DIMENSIONS	
09	INSTALLATION REQUIREMENTS	INSTALLATION
10	INSTALLATION	
13 13 14	FEATURES Technical information Warnings	TECHNICAL INFORMATION



ATTENTION! This document, along with the User Manual, is a part of the device and is being delivered along with the fireplace (hereinafter collectively referred to as «Instructions»). If one or both of these documents weren't delivered with your fireplace, please contact the manufacturer prior to the installation and/or use of the fireplace.

- Make sure to read this Technical. Documentation (hereinafter «Documentation») before using the fireplace!
- Keep this Documentation in a safe place for the lifetime of the fireplace!
- This appliance by design, method of operation, consumer properties and technical safety fully complies with the requirements of the European Standard EN 16647:2015



ATTENTION! Please follow local laws when using the appliance.

### **SYMBOLS**



FIRE AND BURN HAZARD SIGN



 A WARNING SIGN indicates a potential for property damage, personal injury, or death



AN ATTENTION SIGN indicates important information

# CONFIGURATION


## Standard configuration

 
	Smart fireplace (Standard top panel Black matte)		
	1 pc		
	Fireplace box		
	1 pc		
	Panel with front glass		
	1 pc		
(;	Back glass		
	1 pc		
	Remote control		
	1 pc		
A.A.	Mounting handles		
	2 pcs		

	Fuel neck	
V	1 pc	
	Protection housings for the glass	
	4 pcs	
<b>O</b> )	Screw M8	
	4 pcs	
10	Nut M5	
	8 pcs	
	Wrenches for installation	
(5)	2 pcs	
	Packaging	
	1 pc	
nevelagra	Documentation	
	1 set	


### Optional extra

You can add any option listed below:

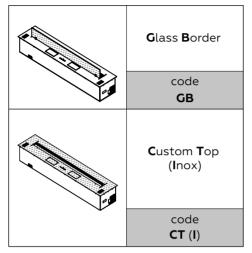





# FIREPLACE INTERFACES

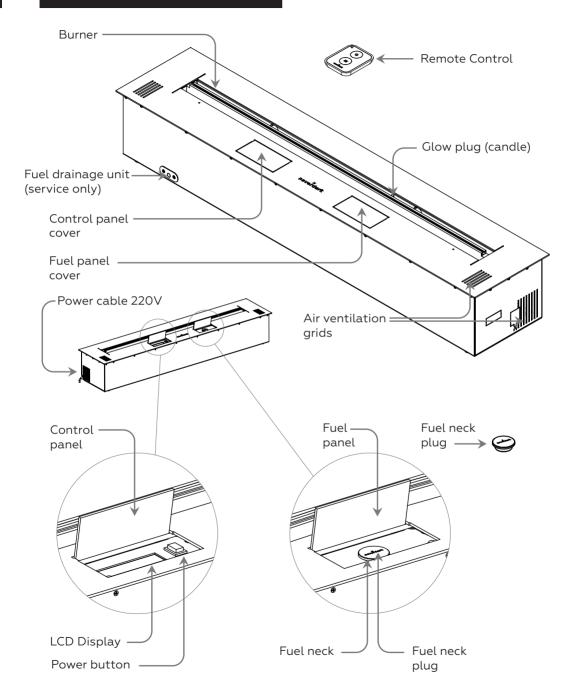



# DIMENSIONS

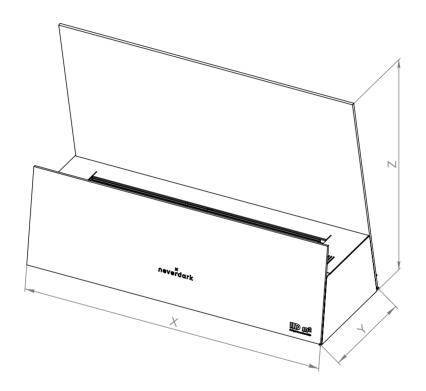


Standard range		х	Y	z	
Model	Code	Length, mm	Depth, mm	Height, mm	Weight, kg
Fild	FLD	1000	371	745	62

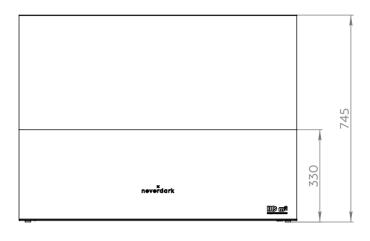

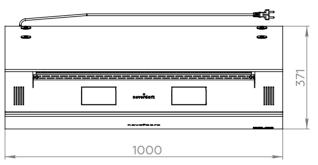

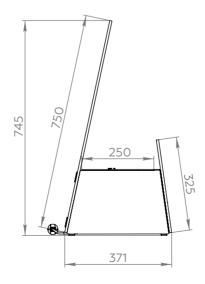

# **INSTALLATION REQUIREMENTS**

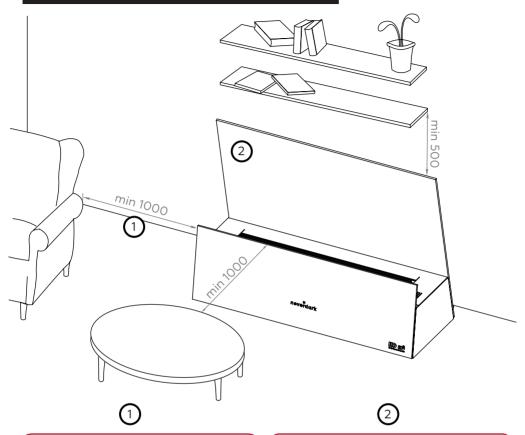



#### **WARNING!**

Min 1000 mm to flammable objects from any exposed side of the fireplace.

Min 500 mm to flammable objects from any closed side of the fireplace.



#### **WARNING!**

Installing the fireplace incorrectly can cause the fireplace to malfunction.



#### **WARNING!**


The surface can heat up to 90°C.




**WARNING!** For correct operation of the Fireplace, it must be installed 100% horizontally according to the level!




# INSTALLATION

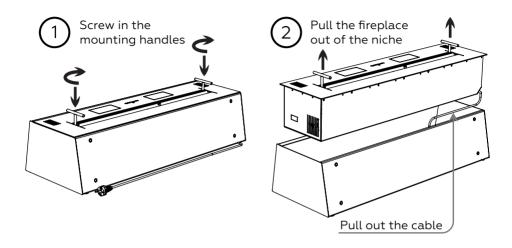

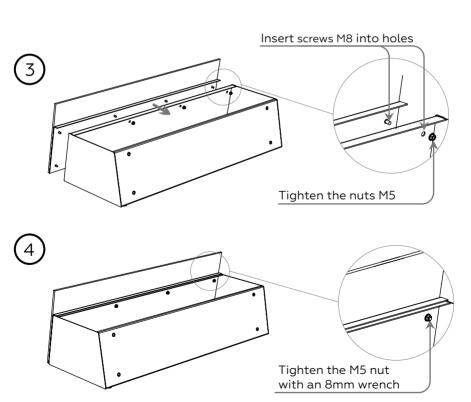





WARNING! 220V cable connection must be carried out by a qualified electrician.

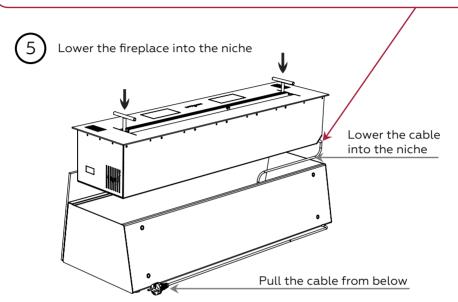


Unscrew the mounting handles after installation

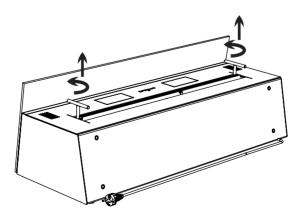



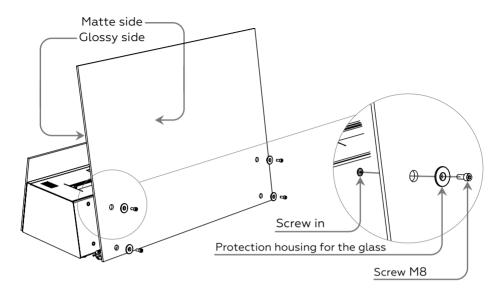

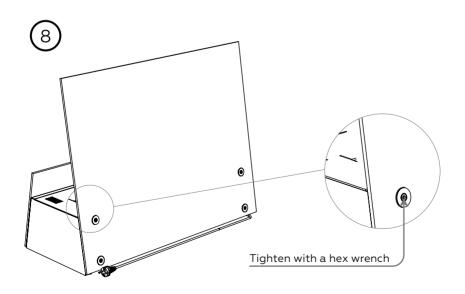

# **FEATURES**

#### **Technical information**

	Fireplace model		
Parameters	Fild		
Tank volume, l	3,1		
System volume, l	3,5		
Consumption, I/h (min   max)	0,6   1,3		
Average consumption, I/h (min   max)	1,0		
Burning time, h (min   max)	2,4   5,2		
Room size, m <sup>2</sup> (with I without ventilation system)	35   88		
Max power consumption, kW	0,6		
Heat power, kW (min   max)	3,9   8,5		
Air consumption, m³/h (min   max)	1,1   2,4		
CO <sub>2</sub> release, m <sup>3</sup> /h (min   max)	0,5   1,0		

<sup>\*</sup> Kindly note that some parameters may slightly vary (within 10%), due to different manufacturing date, climate/surrounding effects, fuel, etc.





### **Warnings**



The manufacturer does not recommend placing objects that are sensitive to high temperatures above or next to the fireplace as this may significantly shorten their service lifetime.

In case the Technical Documentation and User Manual were not followed, the manufacturer would not be responsible for any damage to objects above or next to the fireplace.



**ATTENTION!** Kindly follow next rules while using the Neverdark fireplace:

- Keep away from children:
- Ensure that the wall/table/floor on which you place the appliance can withstand its weight;
- Install in a place protected from draughts only;
- Do not cover top or side ventilation grids;
- Do not place flammable objects on the appliance;
- Keep a carbon dioxide fire extinguisher within sight;
- The use of a separate electricity line with a fuse and/or circuit breaker is mandatory;
- For comfortable use of the fireplace it is necessary to ensure the supply of a fresh air into the room, as well as removal of a cobustion products. It can be a ventilation extractor, recuperator or an opened window;
- Keep this Documentation in a safe place for the lifetime of the fireplace!

#### NEVERDARK LLC

63 Hetmana Doroshenka st. Chernivtsi, Ukraine

neverdark.one