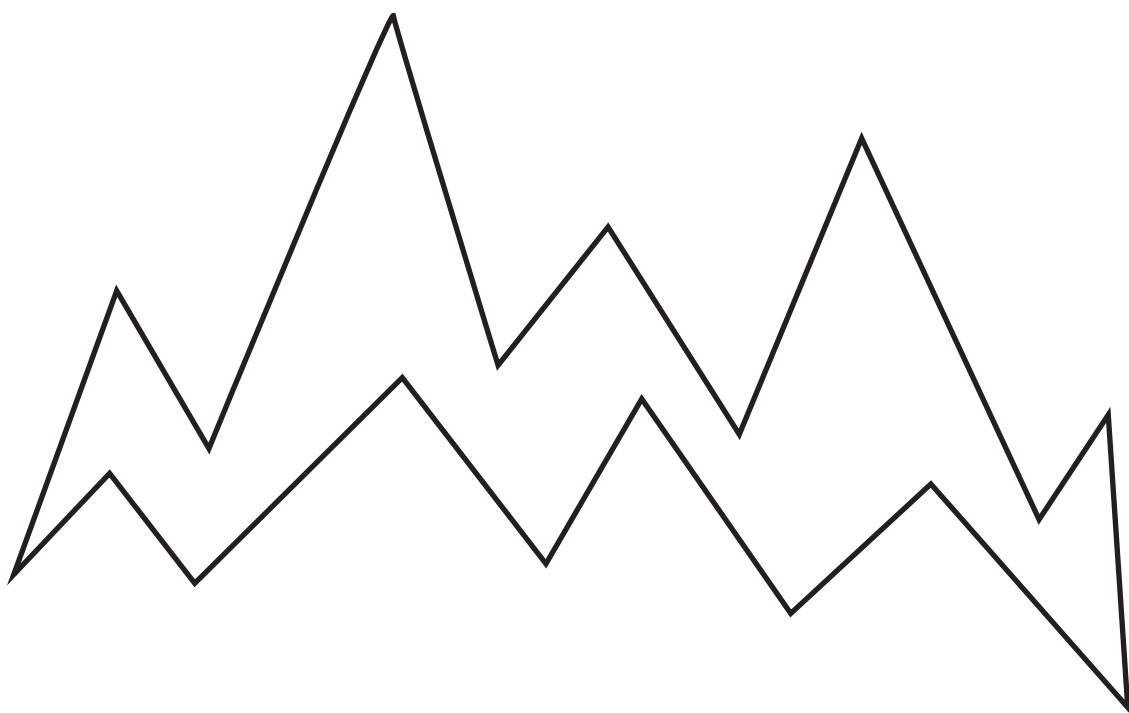


neverdark^x

Neverdark FIRETEC

Smart fireplace



TECHNICAL DOCUMENTATION

CONTENT

04	CONFIGURATION	FIREPLACE
04	Standard configuration	
05	Optional Extra	
.....		
06	THERMOBOXES	
.....		
07	FIREPLACE INTERFACES	INSTALLATION
.....		
08	DIMENSIONS	
.....		
09	NICHE PREPARATION	INSTALLATION
09	Niche dimensions	
11	Niche requirements	
.....		
12	INSTALLATION	TECHNICAL INFORMATION
.....		
13	FEATURES	
13	Technical information	TECHNICAL INFORMATION
14	Warnings	



ATTENTION! This document, along with the User Manual, is a part of the device and is being delivered along with the fireplace (hereinafter collectively referred to as «Instructions»). If one or both of these documents weren't delivered with your fireplace, please contact the manufacturer prior to the installation and/or use of the fireplace.

- Make sure to read this Technical Documentation (hereinafter «Documentation») before using the fireplace!
- Keep this Documentation in a safe place for the lifetime of the fireplace!
- This appliance by design, method of operation, consumer properties and technical safety fully complies with the requirements of the European Standard EN 16647:2015



ATTENTION! Please follow local laws when using the appliance.

SYMBOLS



FIRE AND BURN HAZARD SIGN



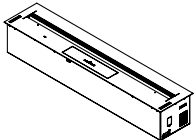
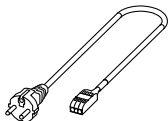
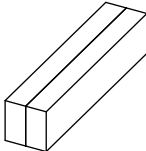
 
A WARNING SIGN indicates a potential for property damage, personal injury, or death



AN ATTENTION SIGN indicates important information

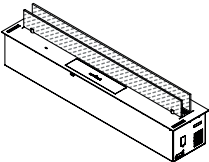
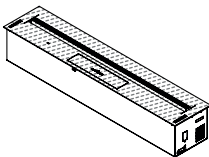
CONFIGURATION

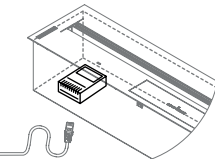
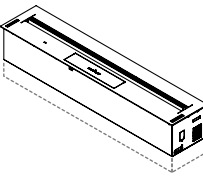
Standard configuration

	Smart fireplace (Standard top panel Black glossy)		Fuel hose
	1 pc		1 pc
	Power cable: Euro Plug – WAGO (length 2,7 m)		Packaging
	1 set		1 pc
	Mounting handles		Documentation
	2 pcs		1 set

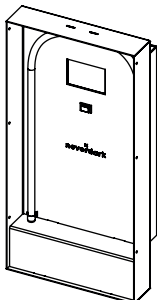
Optional extra

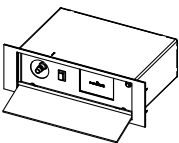
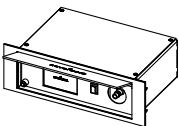
You can add any option listed below:

	Glass Border (one or two)
	code GB (1, 2)
	Custom Top (Matte (black), RAL Glossy , RAL Matte , Inox)
	code CT (M, RG, RM, I)

	Remote Control
	code RC
	Smart Home connection module
	code SH
	Enlarged Fuel Tank
	code EFT

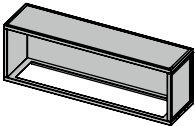
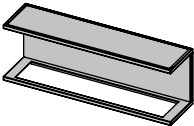
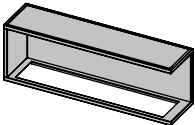
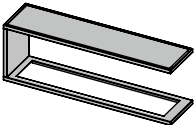
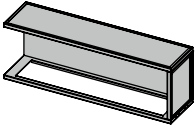
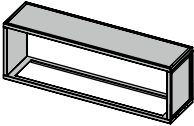
ARS (the external control and refuelling module) is available in three configurations:

	Standard ARS
	code S-ARS

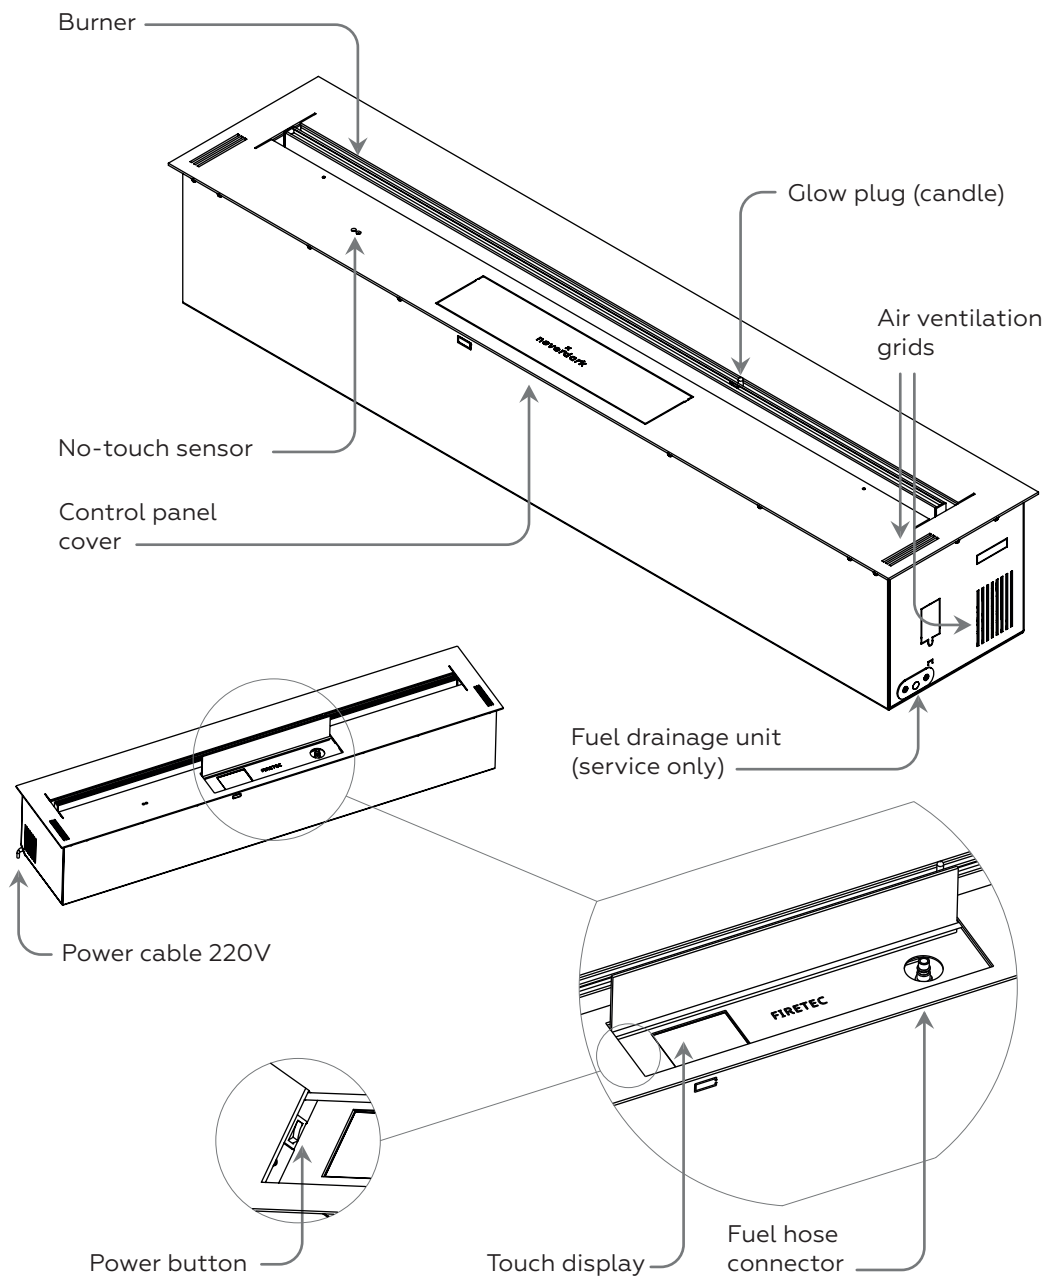
	Mini ARS (down)
	code M-ARS(down)
	Mini ARS (up)
	code M-ARS(up)

THERMOBOXES

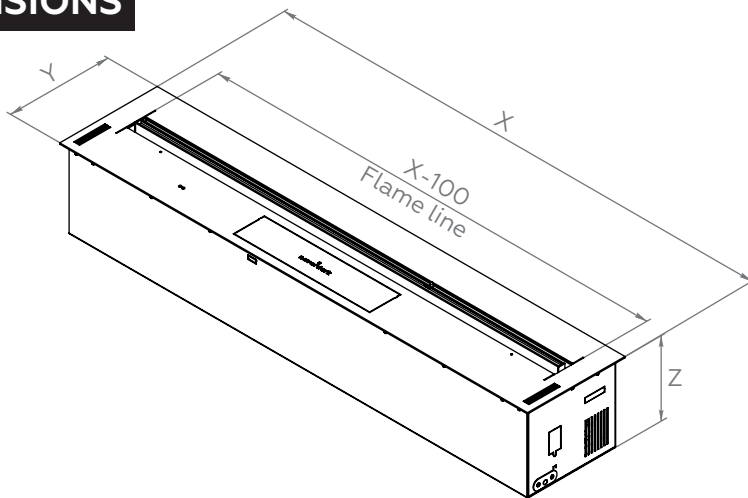
You can also choose the Neverdark Thermobox for your fireplace. The Thermobox can withstand temperatures up to 200°C, allowing you to choose any material for lining the niche.

	Single-Sided code TSS		Three-Sided code TTS
	Right Corner code TRC		Room Divider code TRD
	Left Corner code TLC		See-Through code TST

FIREPLACE INTERFACES



DIMENSIONS

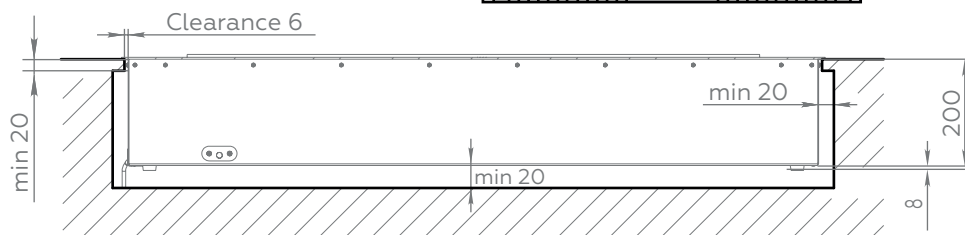
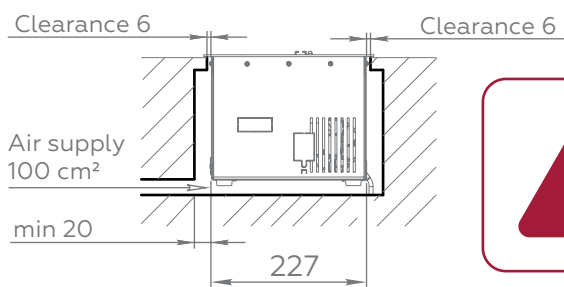
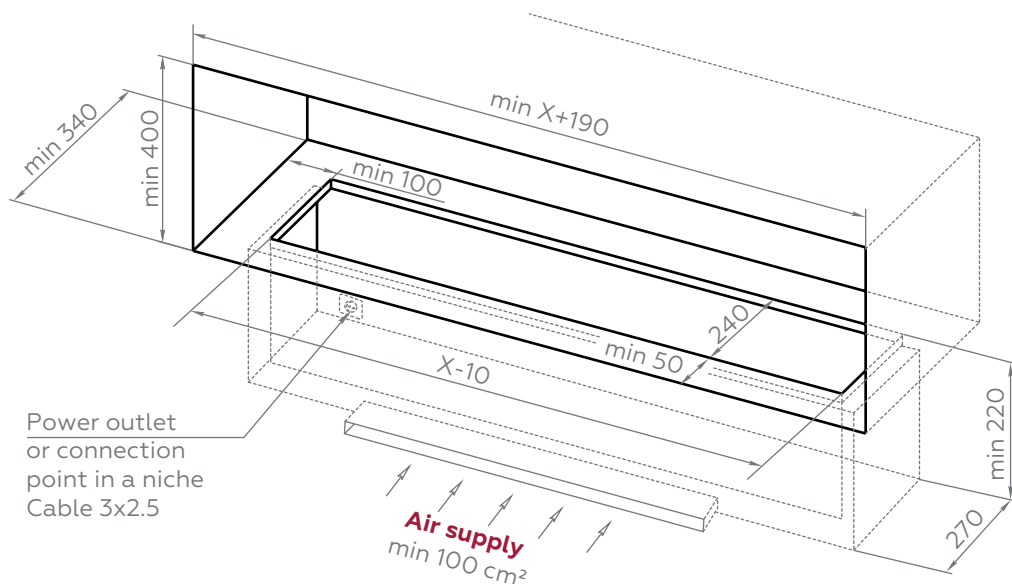


Standard range

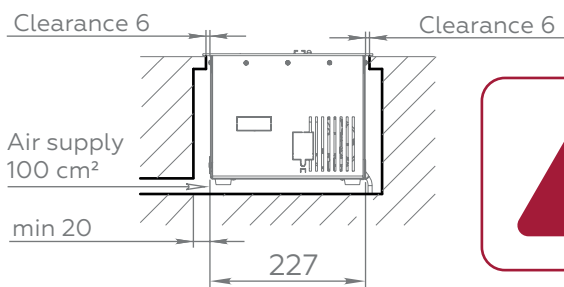
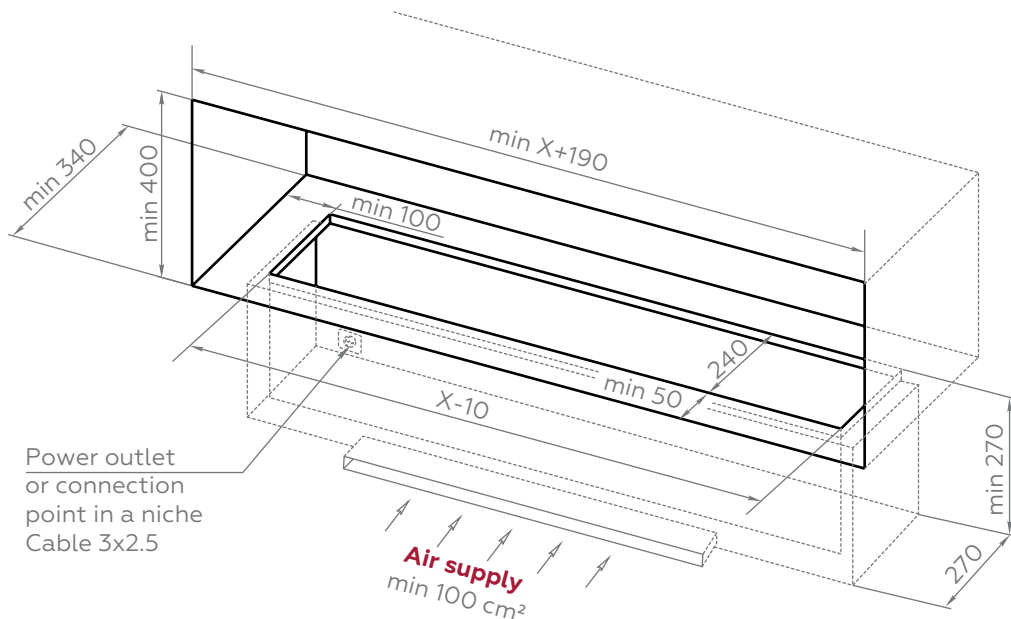
Standard range		X	Y	Z	
Model	Code	Length, mm	Depth, mm	Height, mm	Weight, kg
Firetec 700	F7	700	250	205	21
	F7.EFT			255	25
Firetec 800	F8	800		205	24
	F8.EFT			255	28
Firetec 1000	F10	1000		205	31
	F10.EFT			255	34
Firetec 1200	F12	1200		205	35
	F12.EFT			255	40
Firetec 1500	F15	1500		205	44
	F15.EFT			255	48
Firetec 2000	F20	2000		205	58
	F20.EFT			255	65
Firetec 2500	F25	2500		205	72
	F25.EFT			255	82

NICHE PREPARATION

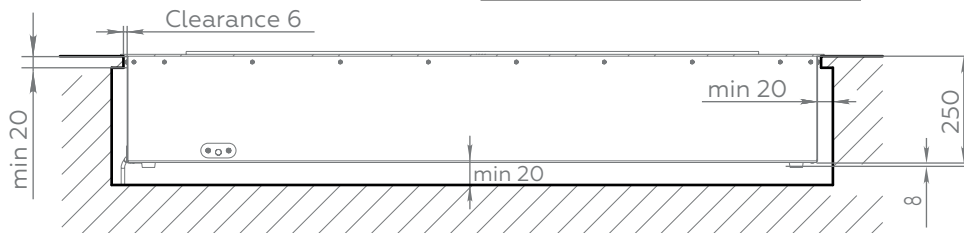
Niche dimensions for the fireplace with standard fuel tank



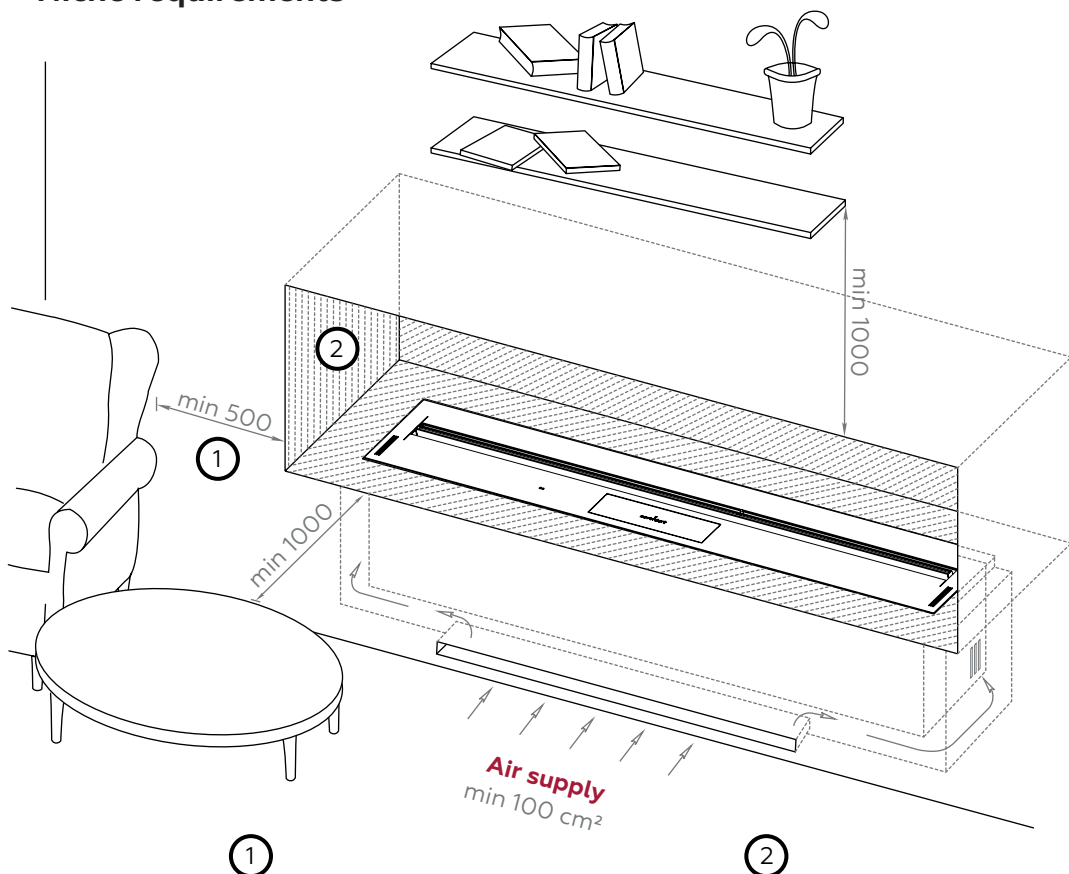
Niche dimensions for the fireplace with enlarged fuel tank



WARNING! For correct operation of the Fireplace, it must be installed 100% horizontally according to the level!



Niche requirements



WARNING!

Min 1000 mm to flammable objects from any exposed side of the niche.

Min 500 mm to flammable objects from any closed side of the niche.



WARNING!

Heat-resistant material which withstands 150°C at least.

Alternatively, a non heat-resistant material + Neverdark Thermobox

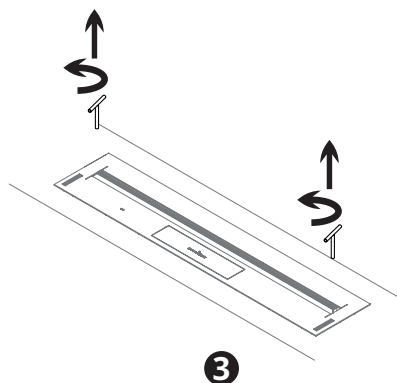
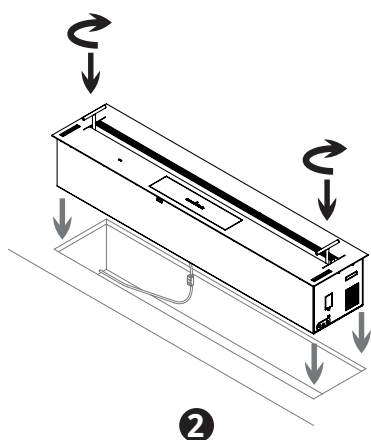
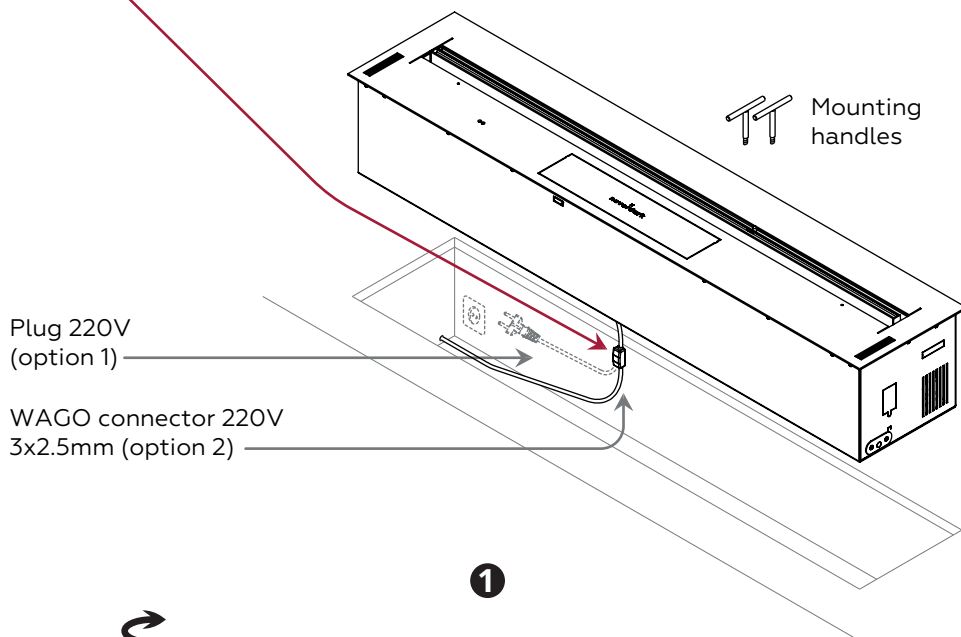


WARNING! For safe and correct operation of the fireplace it is mandatory to provide an air supply opening (100 cm² at least) in the lower part of the niche.

INSTALLATION



WARNING! 220V cable connection must be carried out by a qualified electrician.



FEATURES

Technical information

Parameters		Fireplace model						
		Firetec 700	Firetec 800	Firetec 1000	Firetec 1200	Firetec 1500	Firetec 2000	Firetec 2500
Tank volume, l	Standard tank	3,3	3,9	5,2	6,4	7,9	10,7	13,5
	Enlarged Fuel Tank (EFT)	4,6	5,4	7,2	8,9	11,0	14,9	18,8
System volume, l	Standard tank	3,7	4,4	5,8	7,2	8,7	12,4	15,6
	Enlarged Fuel Tank (EFT)	5,1	6,1	8,1	10,0	12,1	17,2	21,7
Burning time, h (min max)	Standard tank	4,1 9,4	3,9 9,8	3,7 8,7	4,0 9,7	4,0 8,8	4,3 8,9	3,9 7,1
	Enlarged Fuel Tank (EFT)	5,8 13,1	5,4 13,5	5,1 12,0	5,6 13,5	5,5 12,2	6,0 12,4	4,2 9,9
Consumption, l/h (min max)		0,4 0,8	0,4 1,0	0,6 1,4	0,7 1,6	0,9 2,0	1,2 2,5	1,9 4,5
Average consumption, l/h (min max)		0,6	0,7	1,0	1,1	1,5	1,9	3,2
Room size, m ² (with without ventilation system)		22 54	27 68	38 95	43 109	54 136	68 170	95 306
Max power consumption, kW		0,55	0,55	0,9	0,9	1,0	1,4	1,8
Heat power, kW (min max)		2,3 5,2	2,6 6,5	3,9 9,1	4,3 10,4	5,9 13,0	7,8 16,3	12,4 29,3
Air consumption, m ³ /h (min max)		0,6 1,5	0,7 1,9	1,1 2,6	1,2 3,0	1,7 3,7	2,2 4,6	3,5 8,3
CO ₂ release, m ³ /h (min max)		0,3 0,6	0,3 0,8	0,5 1,1	0,5 1,3	0,7 1,6	1,0 2,0	1,5 3,6

* Kindly note that some parameters may slightly vary (within 10%), due to different manufacturing date, climate/surrounding effects, fuel, etc.



**Read
USER MANUAL**



**Read
SAFETY INSTRUCTION**

Warnings



The manufacturer does not recommend placing objects that are sensitive to high temperatures above or next to the fireplace as this may significantly shorten their service lifetime.

In case the Technical Documentation and User Manual were not followed, the manufacturer would not be responsible for any damage to objects above or next to the fireplace.



ATTENTION! Kindly follow next rules while using the Neverdark fireplace:

- Keep away from children;
- Ensure that the wall/table/floor on which you place the appliance can withstand its weight;
- Install in a place protected from draughts only;
- Do not cover top or side ventilation grids;
- Do not place flammable objects on the appliance;
- Keep a carbon dioxide fire extinguisher within sight;
- The use of a separate electricity line with a fuse and/or circuit breaker is mandatory;
- For comfortable use of the fireplace it is necessary to ensure the supply of a fresh air into the room, as well as removal of a combustion products. It can be a ventilation extractor, recuperator or an opened window;
- Keep this Documentation in a safe place for the lifetime of the fireplace!

NEVERDARK LLC

63 Hetmana Doroshenka st.
Chernivtsi, Ukraine

neverdark.one